



# M-7095-GT Transaxle Oil Cooler INSTRUCTION SHEET

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

Please contact the Techline for the most current instruction information (586) 468-1356.

!!! PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION !!!

## TRANSAXLE OIL COOLER KIT INCLUDES:

<u>Item #</u>	<u>Qty</u>	<u>Description</u>
1	1	Transaxle Oil Cooler Assembly
2	1	Hose Assembly
3	2	Adapter Fittings
4	3	Fastener
5	1	Fastener

**NOTE:** Before starting installation, verify that the kit contents are complete.

## INSTALLATION INSTRUCTIONS:

- STEP 1:** Remove transaxle cooler bypass line from the top of the transaxle housing.
- STEP 2:** Remove fittings from transaxle. Reuse sealing washers on the threaded end of the new fittings (item 3) that are going into the transaxle.
- STEP 3:** Install fittings in transaxle and torque to 27-31 lb-ft.
- STEP 4:** Install cooler assembly using fasteners (item 4) to frame rail utilizing existing holes. Cooler fittings should be facing the back of the vehicle.
- STEP 5:** Install hose assembly (item 2) from fittings on the transaxle to fittings on the cooler. Do not tighten fittings at this time.
- STEP 6:** Attach line clamp to frame rail with fastener (item 5) utilizing the existing hole in frame.
- STEP 7:** Torque fittings on oil lines to oil cooler to 35-39 lb-ft.
- STEP 8:** Torque fittings on oil lines to transaxle to 35-39 lb-ft.
- STEP 9:** Start car and check for leaks.
- STEP 10:** Check fluid level. Use Motorcraft SAE 75W90 Premium Synthetic Transaxle Lubricant XT-75W90-QGT.

**Techline (586) 468-1356**

Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356