

Fault Name	Ford Code
SOL_OPEN_TC_ISO1	C0001 13
DRIVER_SHORT_TC_ISO1	C0001 11
SOL_SHORT_TC_ISO1	C0001 12
SOL_OPEN_TC_ISO2	C0002 13
DRIVER_SHORT_TC_ISO2	C0002 11
SOL_SHORT_TC_ISO2	C0002 12
SOL_OPEN_TC_SUPPLY1	C0003 13
DRIVER_SHORT_TC_SUPPLY1	C0003 11
SOL_SHORT_TC_SUPPLY1	C0003 12
SOL_OPEN_TC_SUPPLY2	C0004 13
DRIVER_SHORT_TC_SUPPLY2	C0004 11
SOL_SHORT_TC_SUPPLY2	C0004 12
ABS_MOTOR_OPEN	C0020 15
ABS_MOTOR_DRV_OR_SUP_OPEN	C0020 12
ABS_MOTOR_LOCKED	C0020 71
WSS_OPEN_FRONT_LEFT	C0031 13
WSS_SHORT_FRONT_LEFT	C0031 17
WSS_MISSING_FRONT_LEFT	C0031 62
WSS_ERRATIC_FRONT_LEFT	C0031 2F
WSS_DROPOUT_FRONT_LEFT	C0031 23
WSS_FAST_MISSING_FRONT_LEFT	C0031 62
WSS_OPEN_FRONT_RIGHT	C0034 13
WSS_SHORT_FRONT_RIGHT	C0034 17
WSS_MISSING_FRONT_RIGHT	C0034 62
WSS_ERRATIC_FRONT_RIGHT	C0034 2F
WSS_DROPOUT_FRONT_RIGHT	C0034 23
WSS_FAST_MISSING_FRONT_RIGHT	C0034 62
WSS_OPEN_REAR_LEFT	C0037 13
WSS_SHORT_REAR_LEFT	C0037 17
WSS_MISSING_REAR_LEFT	C0037 62
WSS_ERRATIC_REAR_LEFT	C0037 2F
WSS_DROPOUT_REAR_LEFT	C0037 23
WSS_FAST_MISSING_REAR_LEFT	C0037 62
WSS_OPEN_REAR_RIGHT	C003A 13
WSS_SHORT_REAR_RIGHT	C003A 17
WSS_MISSING_REAR_RIGHT	C003A 62
WSS_ERRATIC_REAR_RIGHT	C003A 2F
WSS_DROPOUT_REAR_RIGHT	C003A 23
WSS_FAST_MISSING_REAR_RIGHT	C003A 62
BRAKE_SW_FAILED_ALWAYS_ACTIVE	C0040 73
BRAKE_SW_FAILED_NEVER_ACTIVE	C0040 72
MISMATCH_TIRE	C0078 61
DRIVER_MODE_SWITCH_STUCK_ON	C0089 73
PWR_SW_SLIP_CONTROL_OPEN	C1A76 13
PWR_SW_SLIP_CONTROL_SHORT	C1A76 12
SOL_OPEN_ISO_FRONT_LEFT	C1A78 13
DRIVER_SHORT_ISO_FRONT_LEFT	C1A78 11

SOL_SHORT_ISO_FRONT_LEFT	C1A78	12
SOL_OPEN_DUMP_FRONT_LEFT	C1A79	13
DRIVER_SHORT_DUMP_FRONT_LEFT	C1A79	11
SOL_SHORT_DUMP_FRONT_LEFT	C1A79	12
SOL_OPEN_ISO_FRONT_RIGHT	C1A80	13
DRIVER_SHORT_ISO_FRONT_RIGHT	C1A80	11
SOL_SHORT_ISO_FRONT_RIGHT	C1A80	12
SOL_OPEN_DUMP_FRONT_RIGHT	C1A81	13
DRIVER_SHORT_DUMP_FRONT_RIGHT	C1A81	11
SOL_SHORT_DUMP_FRONT_RIGHT	C1A81	12
SOL_OPEN_ISO_REAR_LEFT	C1A82	13
DRIVER_SHORT_ISO_REAR_LEFT	C1A82	11
SOL_SHORT_ISO_REAR_LEFT	C1A82	12
SOL_OPEN_DUMP_REAR_LEFT	C1A83	13
DRIVER_SHORT_DUMP_REAR_LEFT	C1A83	11
SOL_SHORT_DUMP_REAR_LEFT	C1A83	12
SOL_OPEN_ISO_REAR_RIGHT	C1A84	13
DRIVER_SHORT_ISO_REAR_RIGHT	C1A84	11
SOL_SHORT_ISO_REAR_RIGHT	C1A84	12
SOL_OPEN_DUMP_REAR_RIGHT	C1A85	13
DRIVER_SHORT_DUMP_REAR_RIGHT	C1A85	11
SOL_SHORT_DUMP_REAR_RIGHT	C1A85	12
MC PRES SEN SHORTED HIGH	C1A99	17
MC PRES SEN OPEN OR SHRT LOW	C1A99	14
MCP_SENSOR_STEP_ERROR	C1A99	67
MCP_SENSOR_OFFSET_ERROR	C1A99	62
MCP_SENSOR_RAW_OFFSET_ERROR	C1A99	62
MCP_SENSOR_GAIN_ERROR	C1A99	62
MCP_SENSOR_NOT_ALIVE_ERROR	C1A99	65
MC PRES SEN ERRATIC	C1A99	2F
WSS_MULTIPLE_SENSORS_INOP_FLT	P0000	62
EXCESSIVE_WSS_FAILURE	P0000	29
SOL_OVERTEMP_ISO_FRONT_LEFT	P0000	00
SOL_OVERTEMP_ISO_FRONT_RIGHT	P0000	00
SOL_OVERTEMP_ISO_REAR_LEFT	P0000	00
SOL_OVERTEMP_ISO_REAR_RIGHT	P0000	00
SOL_OVERTEMP_TC_ISO1	P0000	00
SOL_OVERTEMP_TC_ISO2	P0000	00
SOL_OVERTEMP_DUMP_FRONT_LEFT	P0000	00
SOL_OVERTEMP_DUMP_FRONT_RIGHT	P0000	00
SOL_OVERTEMP_DUMP_REAR_LEFT	P0000	00
SOL_OVERTEMP_DUMP_REAR_RIGHT	P0000	00
SOL_OVERTEMP_TC_SUPPLY1	P0000	00
SOL_OVERTEMP_TC_SUPPLY2	P0000	00
IGNITION_SWITCH_NOT_STABLE_DET	P0000	00
ENG_OFF_TIME_INVALID_FAULT	P0000	00
CAN_DEVICE_0_INPUTS_INVALID	P0000	87
CAN_DEVICE_1_INPUTS_INVALID	P0000	87
MISSING_VEHICLE_INFORMATION	P0000	87

MISSING_POWERTRAIN_DRIVER_INFO_1	P0000	87
MISSING_TRANS_GEAR_TRQ_CONV	P0000	87
MISSING_ENG_VEH_SP_THROT	P0000	87
MISSING_TORQ_DATA_ENG_FLAGS	P0000	87
AMBIENT_TEMP_INVALID_FAULT	P0000	00
ACCEL_PDL_POS_INVALID_FAULT_INTR	P0000	00
TORQUE_INVALID_FAULT	P0000	00
AXLE_RATIO_INVALID_FAULT	P0000	00
PRNDL_STATUS_INVALID_FAULT	P0000	00
CAN_DEVICE_0_HW_INIT	U0001	49
CAN_DEVICE_0_TX_ACK	U0001	88
COMMS_PSCM_DEVICE_FAILURE	U0031	00
ACCEL_PDL_POS_INVALID_FAULT	U0201	00
RCM_TEMPERATURE_INVALID	U0252	00
SYSTEM_VOLTAGE_LOW	U18E8	16
SYSTEM_VOLTAGE_EXCESSIVE_LOW	U18E8	16
SYSTEM_VOLTAGE_HIGH	U18E8	17
SYSTEM_VOLTAGE_EXCESSIVE_HIGH	U18E8	17
CAN_DEVICE_1_HW_INIT	U1D00	49
COMMS_RCM_PRIVATE_DEVICE_FAILURE	U1D00	87
INTERNAL_5V_SUPPLY_VOLT_FAILURE	U200A	1C
LBIST_CPU_ERROR_R4	U3800	49
LBIST_CPU_ERROR_M3	U3800	49
ROM_FAILURE_R4	U3800	45
ROM_FAILURE_M3	U3800	45
ROM_CRC_FAILURE_R4	U3800	45
ROM_CRC_FAILURE_M3	U3800	45
IMM_TX_ERROR_R4	U3800	44
IMM_TX_ERROR_M3	U3800	44
CRITICAL_DATA_FAILURE_R4	U3800	44
CRITICAL_DATA_FAILURE_M3	U3800	44
RAM_FAILURE_R4	U3800	44
RAM_FAILURE_M3	U3800	44
RAM_ECC_FAILURE_M3	U3800	44
HET_RAM_FAILURE	U3800	44
HET2_RAM_FAILURE	U3800	44
IMPRECISE_ABORT_M3	U3800	49
LOCKUP_M3	U3800	49
NHET_PARITY	U3800	41
CPU_MODE_STACK_FAULT_R4	U3800	43
CPU_MODE_STACK_FAULT_M3	U3800	43
CORE_SYNCRONIZATION_FAILURE	U3800	49
DMA_FAILURE	U3800	49
DCC_FAILURE	U3800	49
MIRAM_AD_REFRESH_FAILURE	U3800	49
MIRAM_VBAT_SW_OVERCURRENT	U3800	49
MIRAM_BOOST_OVER_VOLTAGE	U3800	49
MIRAM_BOOST_UNDER_VOLTAGE	U3800	49
MIRAM_U2_SELECT_FAILURE	U3800	49

MIRAM_PREREG_MODE_SEL_FAILURE	U3800	49
MIRAM_U5_FAILURE	U3800	49
SPI_FAILURE	U3800	49
EXT_WATCHDOG_FAIL	U3800	47
EXT_WATCHDOG_SECONDARY_PATH	U3800	47
WDOG_ASIC_RANDOMNESS_FAILURE	U3800	47
WDOG_DYNAMIC_TEST_FAILURE	U3800	47
AD_PERIPHERAL_TIMEOUT_FAILURE	U3800	49
NVRAM_DEVICE_INOPERATIVE	U3800	49
UNIMPLEMENTED_INTERRUPT_R4	U3800	49
UNIMPLEMENTED_INTERRUPT_M3	U3800	49
UNEXPECTED_EXCEPTION_R4	U3800	49
UNEXPECTED_EXCEPTION_M3	U3800	49
HET_WATCHDOG_TIMEOUT	U3800	49
HET_PROGRAM_ERROR	U3800	49
HET_PROGRAM_OVERFLOW	U3800	49
HET_PERIODIC_INTERRUPT_FAILURE	U3800	49
HET_INTERRUPT_TEST_FAILURE	U3800	44
HET_REGISTER_FAILURE	U3800	44
HET2_WATCHDOG_TIMEOUT	U3800	49
HET2_PROGRAM_ERROR	U3800	49
HET2_PROGRAM_OVERFLOW	U3800	49
HET2_PERIODIC_INTERRUPT_FAILURE	U3800	49
HET2_INTERRUPT_TEST_FAILURE	U3800	44
HET2_REGISTER_FAILURE	U3800	44
MISMATCH_MISR_M3	U3800	44
TASK_OVERRUN_M3	U3800	44
RTOS_FAILURE_M3	U3800	44
TASK_STACK_FAULT_M3	U3800	44
FSMC_LOOPTIME_FAILURE_M3	U3800	44
FSMC_COMMS_FAILURE_M3	U3800	44
MISMATCH_MISR_R4	U3800	44
TASK_OVERRUN_R4	U3800	44
RTOS_FAILURE_R4	U3800	44
TASK_STACK_FAULT_R4	U3800	44
FSMC_COMMS_FAILURE_R4	U3800	44
FSMC_MISMATCH_VELOCITY	U3800	45
SOLENOID_TIMEOUT_FAILURE	U3800	49
SYS_TEMP_SENSOR_INVALID	U3800	4B