



M-20201-ZX3 Focus Strut Tower Brace INSTALLATION INSTRUCTIONS


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS

Please contact the Tech "Hot Line" for the most current instruction information (586) 468-1356

!!! PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION !!!

INSTALLATION INSTRUCTIONS:

- STEP 1:** Unscrew the brake fluid reservoir cap and turn it to the side to make room to install the strut tower brace. On some 2002 and later Focus there is an EGR assembly that needs to be re-located for the brace to fit. It has two 6mm bolts. It is located next to the brake reservoir. Relocate using one bolt and the plastic nipple that sticks out off the fire wall as shown in the pictures below.
- STEP 2:** Remove the two nuts on each strut tower which are closer to the engine. It is not necessary to remove the third (outer) nut.
- STEP 3:** Set the strut tower brace on the car with the holes in the end brackets over the studs on the strut tower.
- STEP 4:** Re-install the nuts on the strut tower, over the strut tower brace brackets. Torque nuts to 18 ft. lbs. (25 Nm).
- STEP 5:** Screw the cap back onto the brake fluid reservoir.

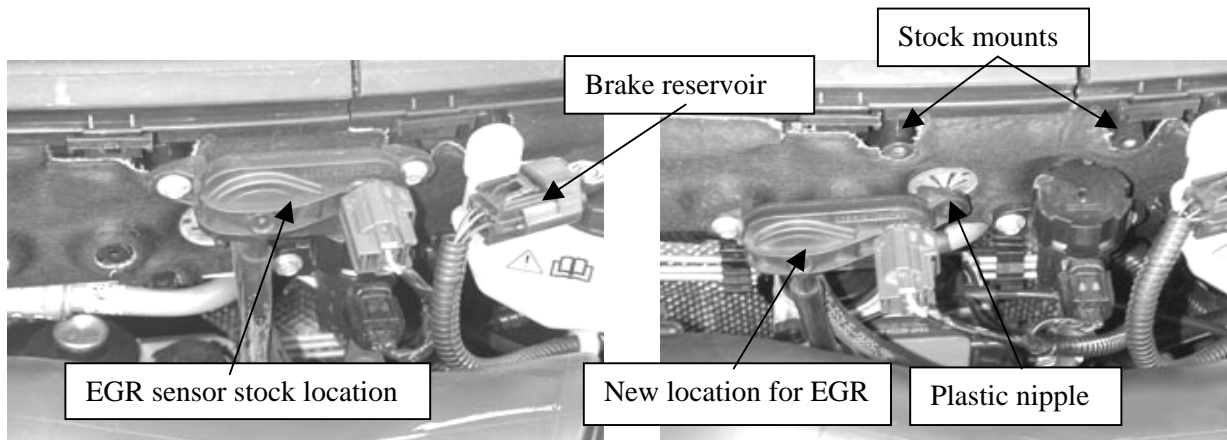

Tech "Hot Line" (586) 468-1356

Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356