



M-16450-FSORB
F-150 2015 → 2022 Super Duty 2017 → 2022
F-Series Off-Road Running Board

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY
For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit <https://www.performanceparts.ford.com> for warranty information



Kit Contents:

- LH Running Board
- RH Running Board
- (12) M8 Nuts

Removal

Ford Factory Shop Manual purchase options www.motorcraftservice.com



FORD PERFORMANCE

M-16450-FSORB

F-150 2015 → 2022


Super Duty 2017 → 2022

F-Series Off-Road Running Board


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

LH side shown, RH similar.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. If equipped: Remove the 6 nuts from the attachment brackets.

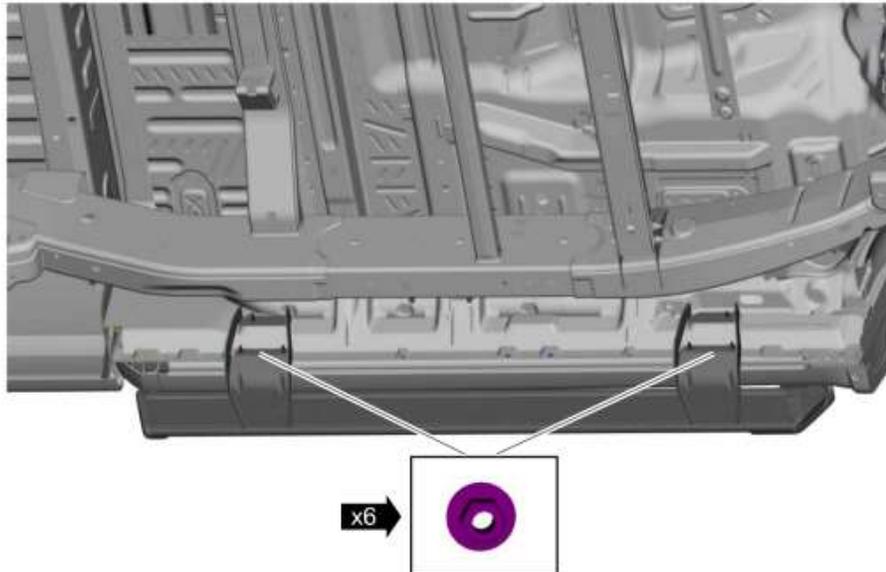

3. Remove the running board assembly.

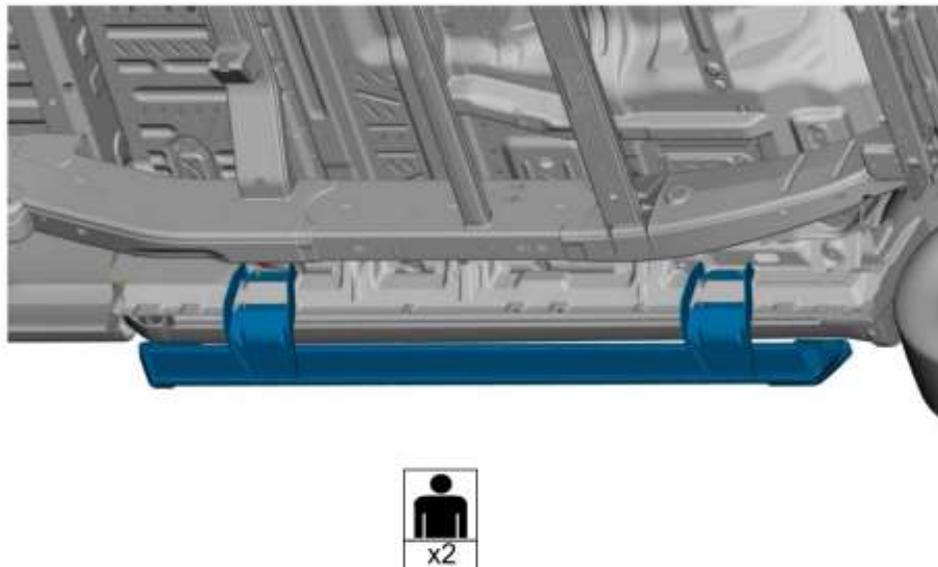

Ford Factory Shop Manual purchase options www.motorcraftservice.com



FORD PERFORMANCE

M-16450-FSORB



F-150 2015 → 2022

Super Duty 2017 → 2022

F-Series Off-Road Running Board

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

4. Install the provided running boards and fasten with provided nuts
Torque: 17 lb.ft (23 Nm)

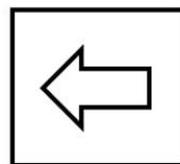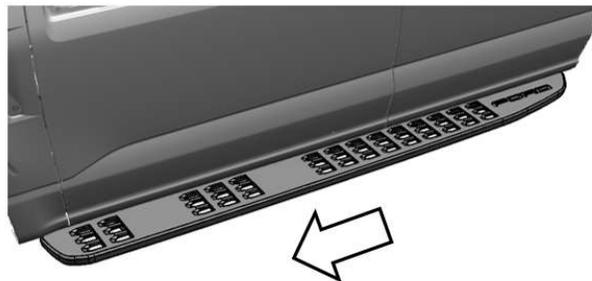

Front of Vehicle Arrow

Ford Factory Shop Manual purchase options www.motorcraftservice.com