



FORD **PERFORMANCE**

M-1447-BLBR, BLMB, BEBR, BRD
2021+MY Bronco
Bronco Overlay Kits

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

iPRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY
For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit <https://www.performanceparts.ford.com> for warranty information



Ford Factory Shop Manual purchase options www.motorcraftservice.com




FORD **PERFORMANCE**

M-1447-BLBR, BLMB, BEBR, BRD
2021+MY Bronco
Bronco Overlay Kits

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

Special Tool(s) / General Equipment

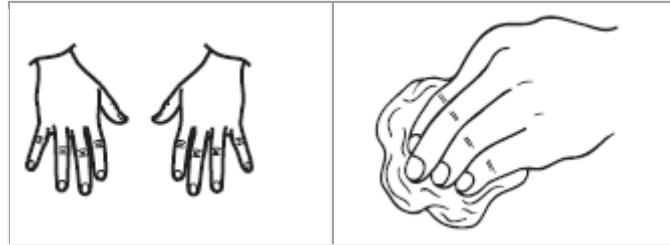

Installation

1. Prepare surface by thoroughly cleaning all the installation surfaces using an isopropyl alcohol mixture and a clean lint free cloth. Allow the surface to dry thoroughly.

NOTE: Emblem cap and vehicle surfaces must be between 70 °F and 110 °F at time of installation. A heat source may be used to reach minimum temperature if necessary.



2. Before removing the adhesive, check fitment of the overlays on the factory parts.

NOTE: Check orientation of the overlays. The first "O" has one notch on the bottom, the "N" has one notch on the bottom, and the last "O" has two notches on the bottom.



Ford Factory Shop Manual purchase options www.motorcraftservice.com



FORD **PERFORMANCE**

**M-1447-BLBR, BLMB, BEBR, BRD
2021+MY Bronco
Bronco Overlay Kits**

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

3. Using the pull tab(s), pull gently to remove the adhesive liner from the backside of the overlay.

NOTE: Do not touch the adhesive liner during installation.



4. Position the overlays over the factory part starting from the top edge then downward, ensuring it is centered properly. Press lightly to adhere.



5. Using a lint-free scratch resistant cloth, press firmly on the overlays from the center working outwards to the edges to ensure maximum adhesion contact.

Ford Factory Shop Manual purchase options www.motorcraftservice.com