



INSTALLATION INSTRUCTIONS

ROCK LIGHT KIT



***THESE INSTRUCTIONS ARE FOR THE FOLLOWING LIGHTS:
A-SERIES ROCK LIGHT KIT (4 or 6 lights)**

IMPORTANT


THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.
Please read through all of these Instructions and tips before proceeding with the installation.

We do our best to provide a simple installation process for all applications however a professional installation is always recommended.

**Always disconnect any power sources connected to your vehicle
before servicing fuses or electrical systems.**

HARNESS/SWITCH WIRING INSTRUCTIONS

Disconnect negative battery terminal before starting your installation, *Do not reattach negative battery terminal to battery until all lights are wired. While routing wire always avoid any heat sources, sharp edges or abrasive surfaces.

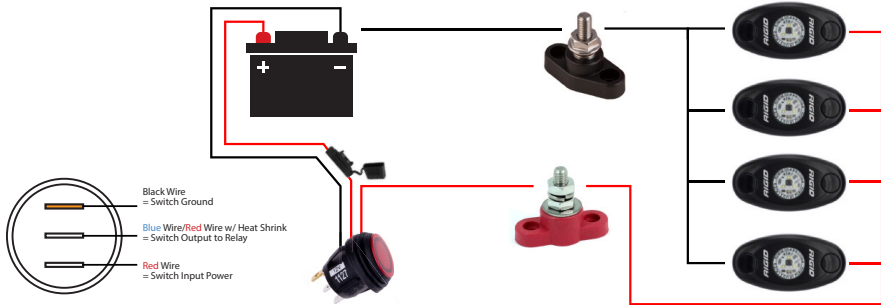

LIGHT MOUNTING INSTRUCTIONS

1. Choose mounting location for A-Series lights.
2. Choose appropriate angled or flat mount pad.
3. Decide if you want to mount with self-tapping screws or nuts & bolts.
4. If using self-tapping screws, position A-Series light where you want it and run screws through black plastic shoulder washers, then through light & mount pad and into place. Wire can be routed through mount pad and out the side or through the mount surface (you will need to drill a hole for the wire if you want to run it through the mount surface).
5. If using nuts & bolts, hold A-Series light in position and mark mount holes. Drill holes using 1/4" bit. If you are using the angled mount pad, holes should be drilled at a 30-degree angle. Position A-Series light in place and insert bolts through black plastic shoulder washers, then through light & mount pad and through surface. Secure with flat washer and lock nut. If you are using the angled mount pad, utilize the wedge washers to equalize the angle of the bolt. Wire can be routed through mount pad and out the side or through the mount surface (you will need to drill a hole for the wire if you want to run it through the mount surface).

LIGHT WIRING INSTRUCTIONS

1. Route light wires from each light to Red and Black posts.
2. Coil or cut any extra wire length then apply supplied crimp-on eyelets to each red and black wire end. Secure all black wires on black grounding post with supplied nut. Secure all red wires to the red post with supplied nut.

At this point you may reattach the negative battery terminal to battery after all lights are wired.

WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty

779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337
www.rigidindustries.com

RIGID, and Rigid Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.

11-12240-A