
## EN INSTALLATION INSTRUCTION MODULAR BUMPER

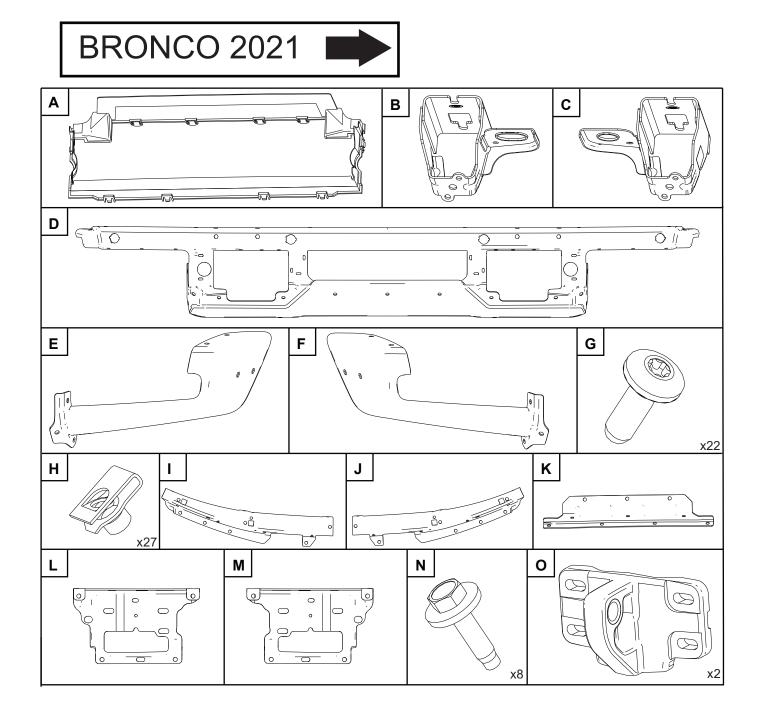



© Copyright Ford 2025 Printed Copies are uncontrolled Expert Fitment Required Subject to alteration without notice




SKM-17757-BMP


Ford

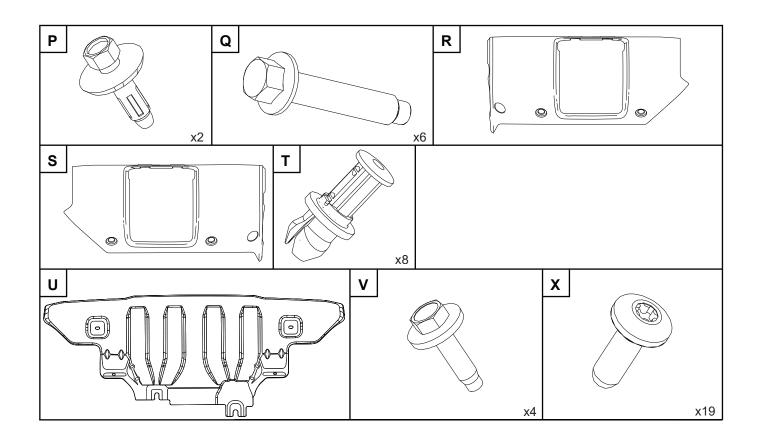

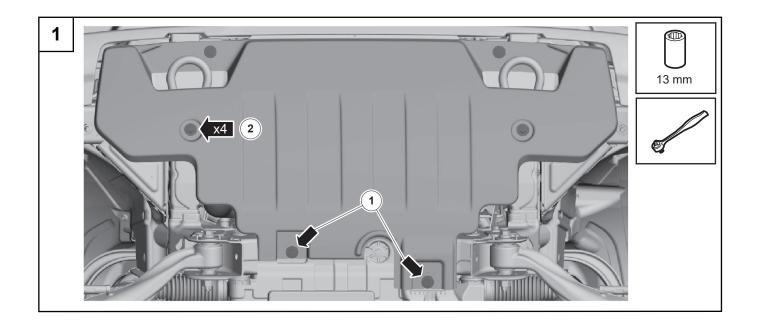





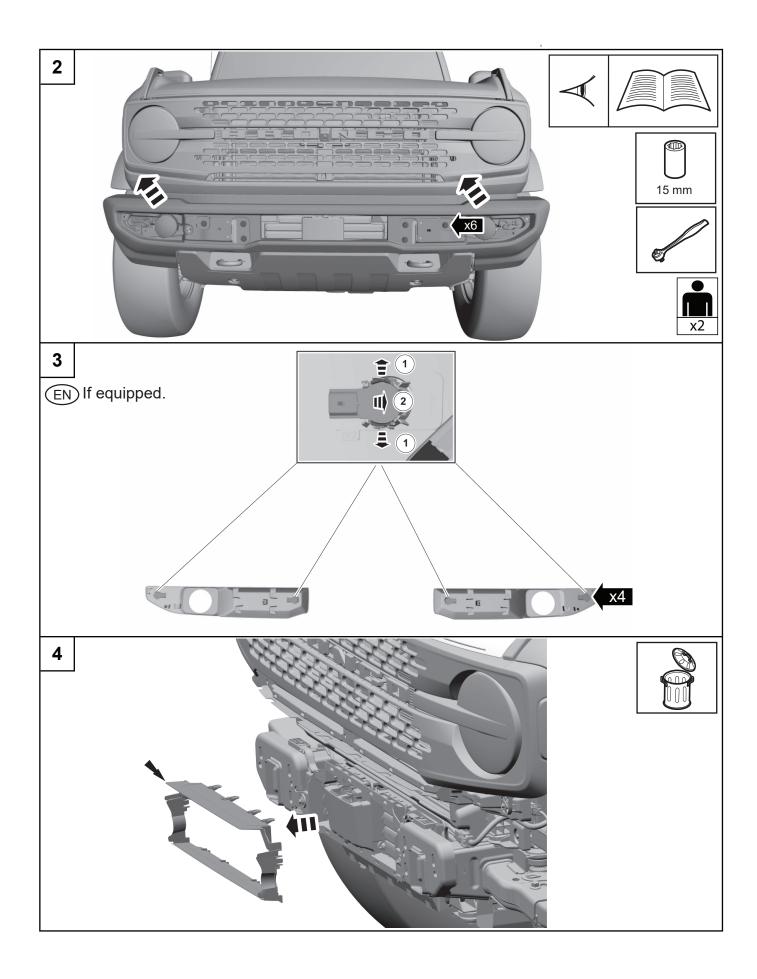


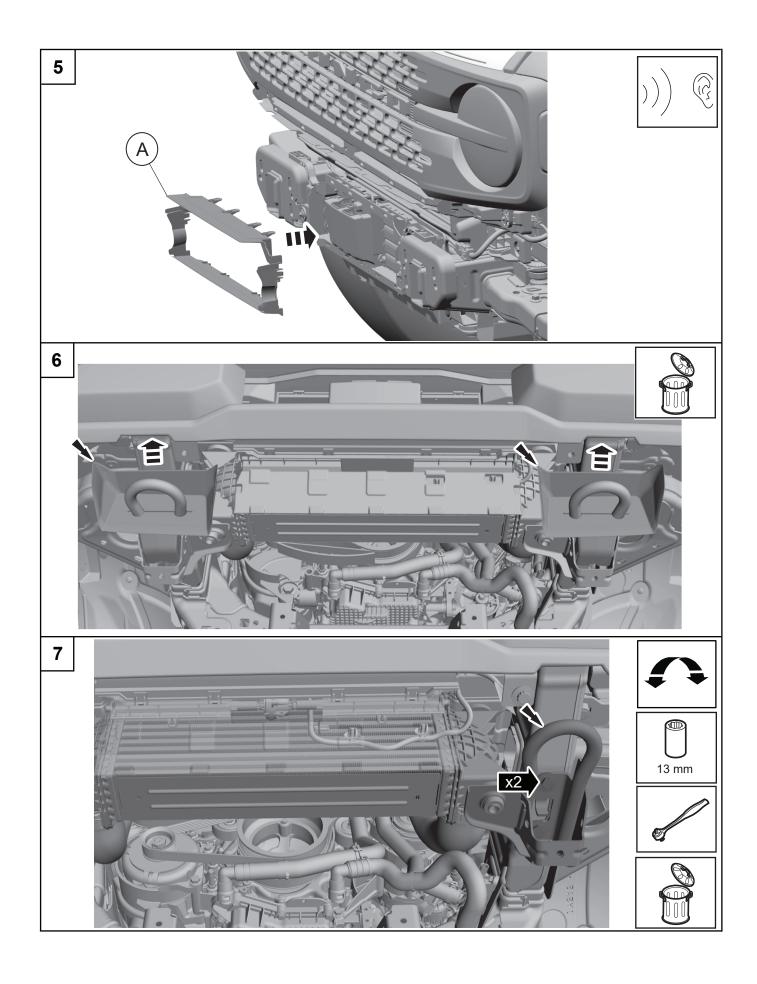




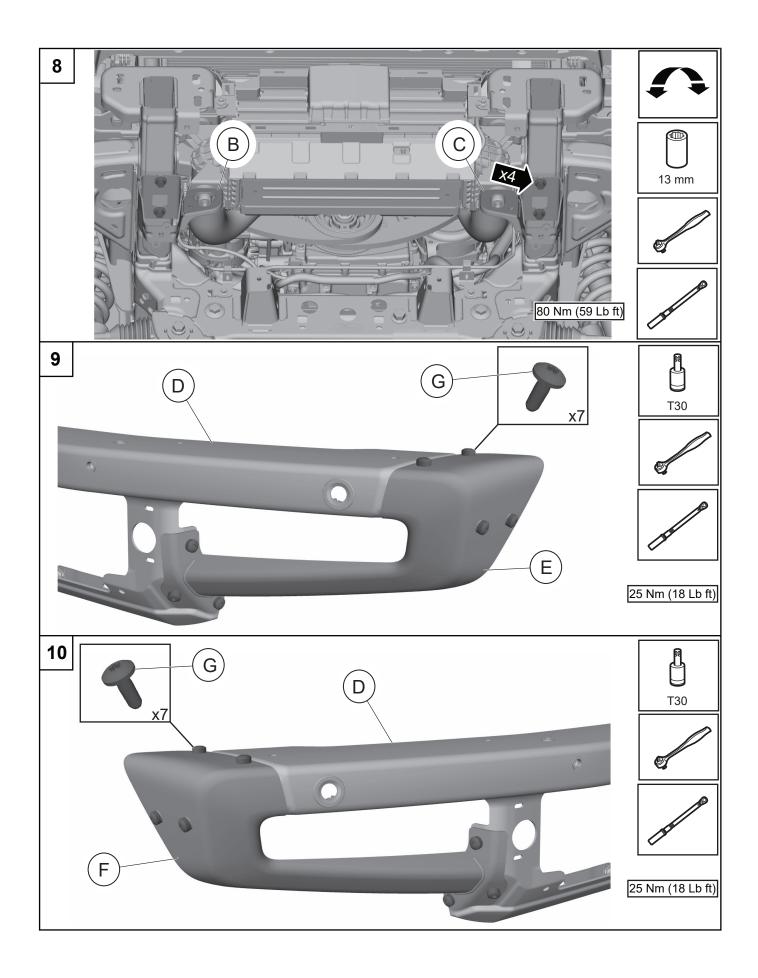


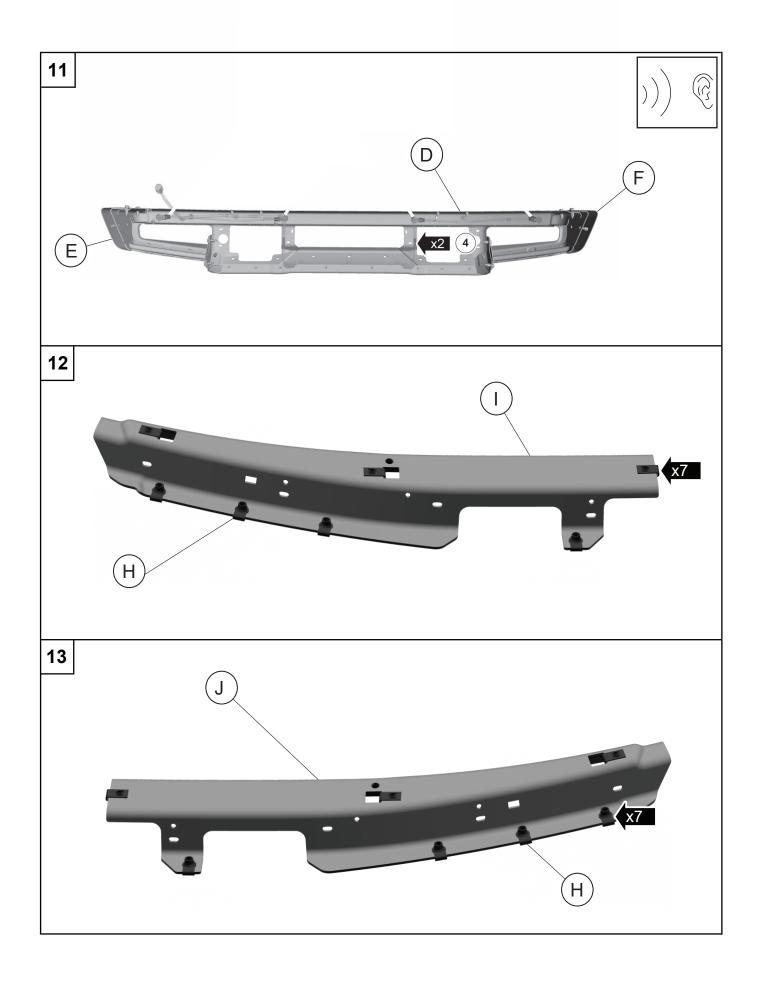


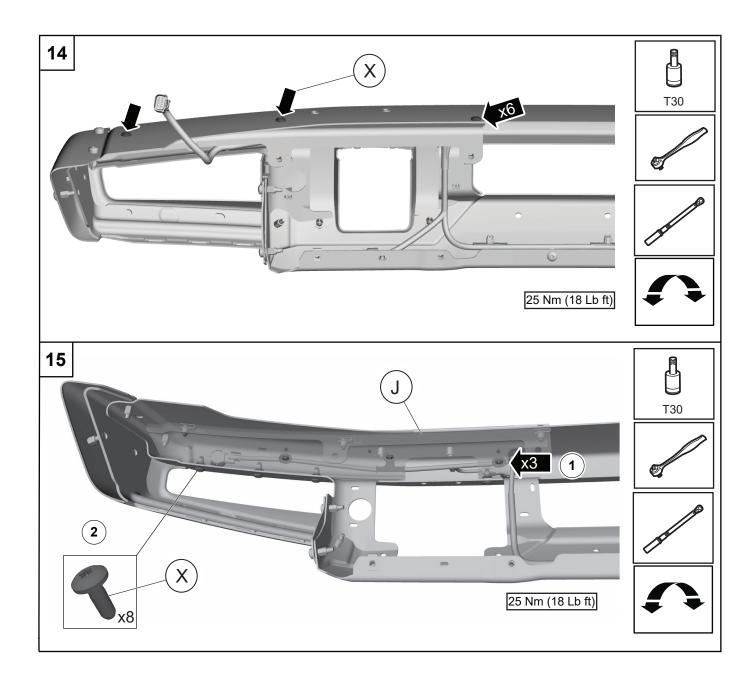




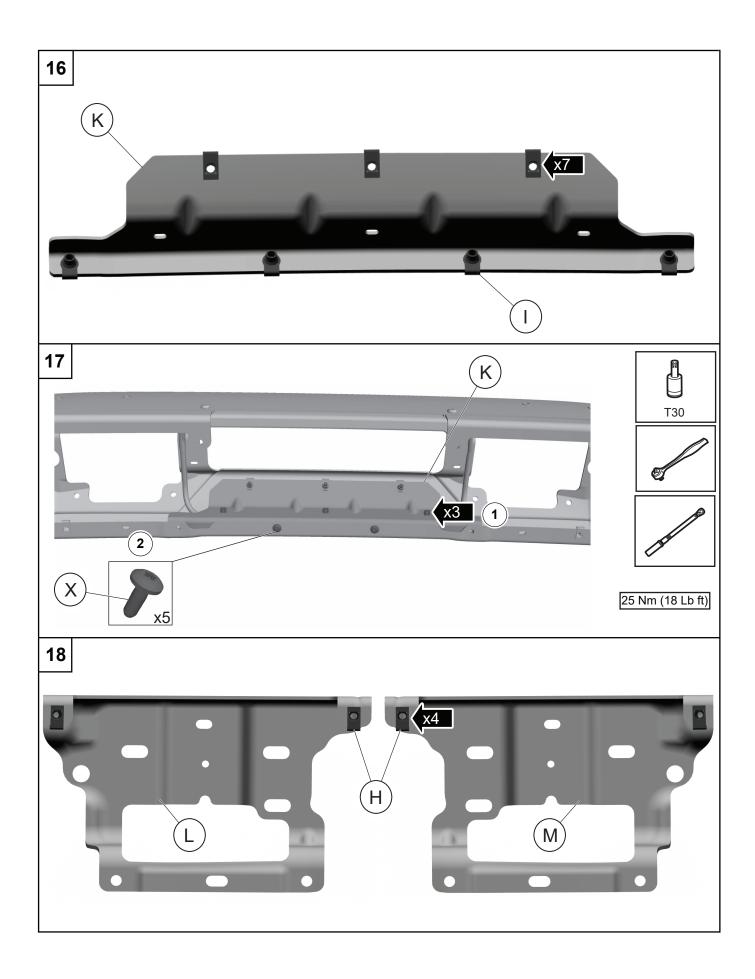


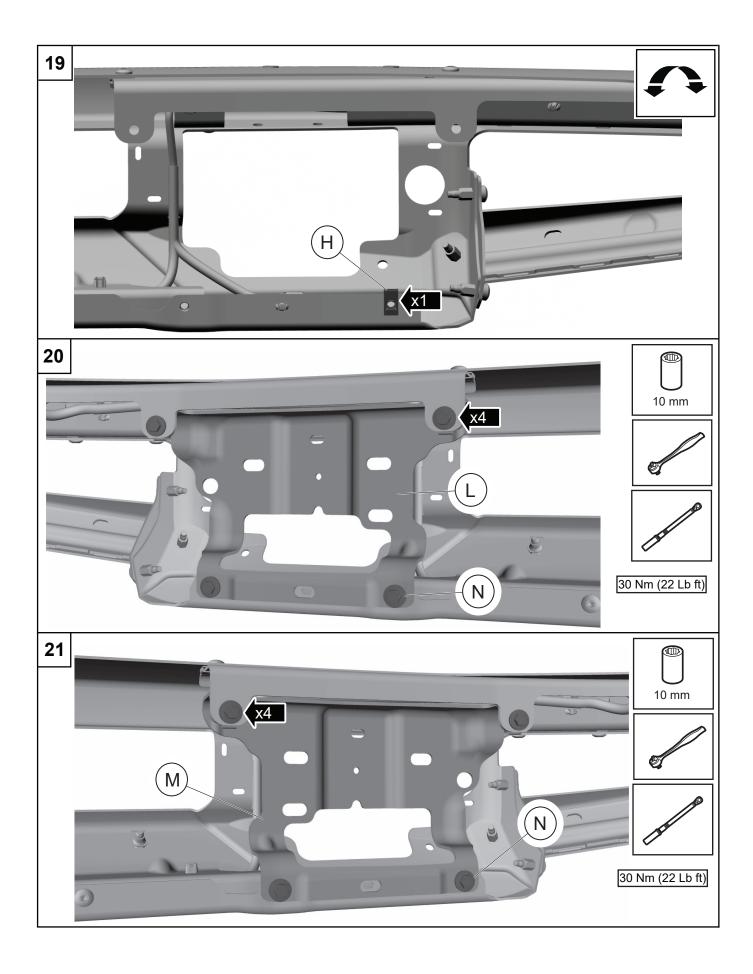

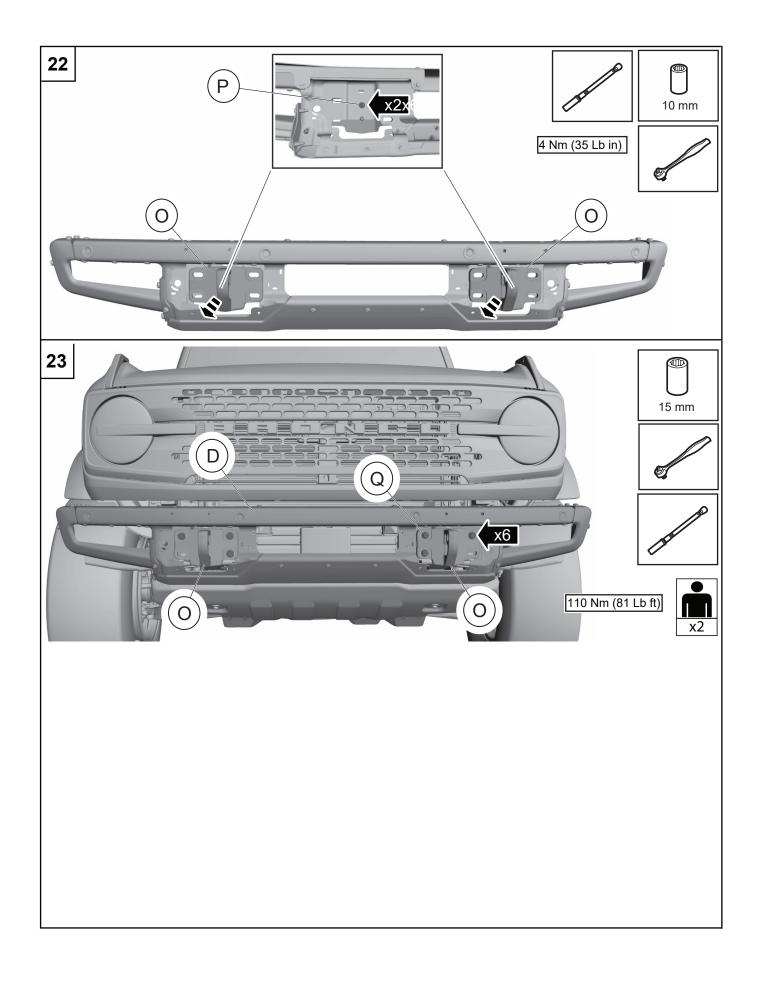



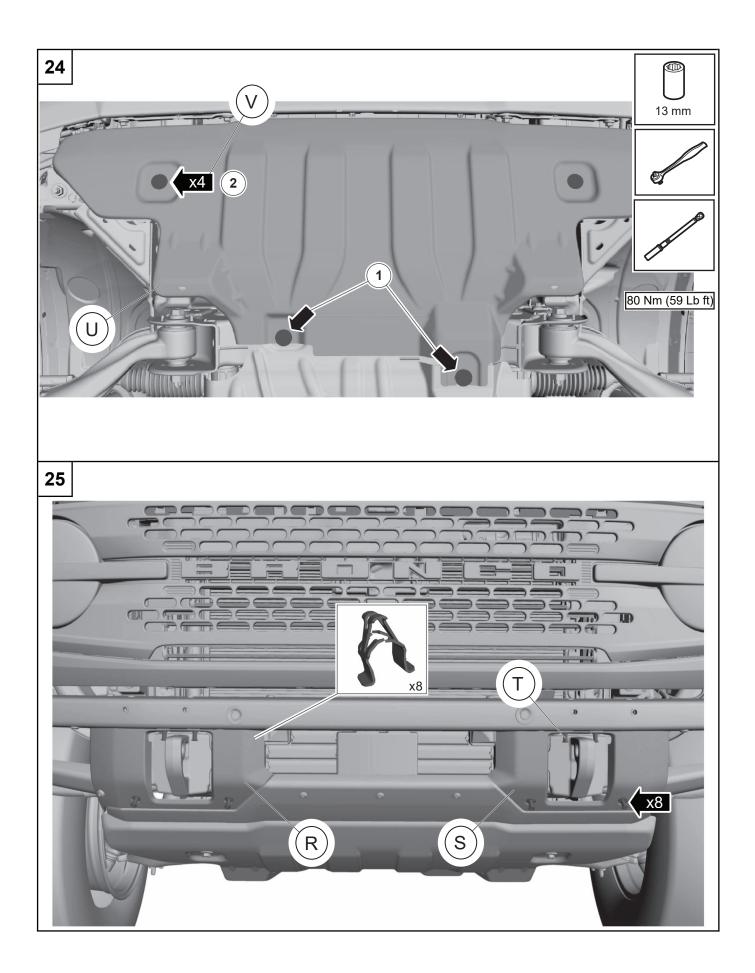

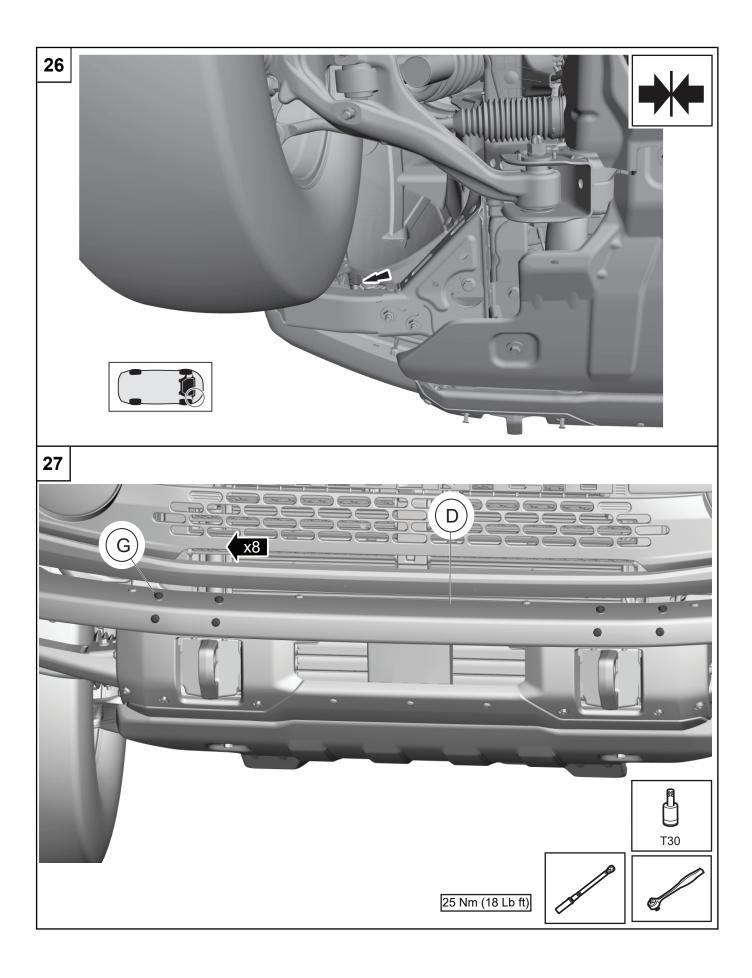

28			
EN 1. Peform the Azmith System Check.			
	2. Perform the Elevation System Check.		X R
NOTE: Follow the FDRS instructions Front Bumper Configuration, under programmable features.			
The passwords for the part numbers are:			
	Front Bumper Configuration	Password	
	Blow Molded to Modular Front Bumper	M2DB-17757-M	
	Modular to Blow Molded Front Bumper	M2DZ-17D957	
	Steel to Modular Front Bumper	M2DB-17757-M	
	Modular to Steel Front Bumper	M2DB-17757-S	

