




M-20201-CBK  
2022MY Bronco  
C-Bow Brace Kit

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

**PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY**  
**For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788**

Please visit <https://www.performanceparts.ford.com> for warranty information

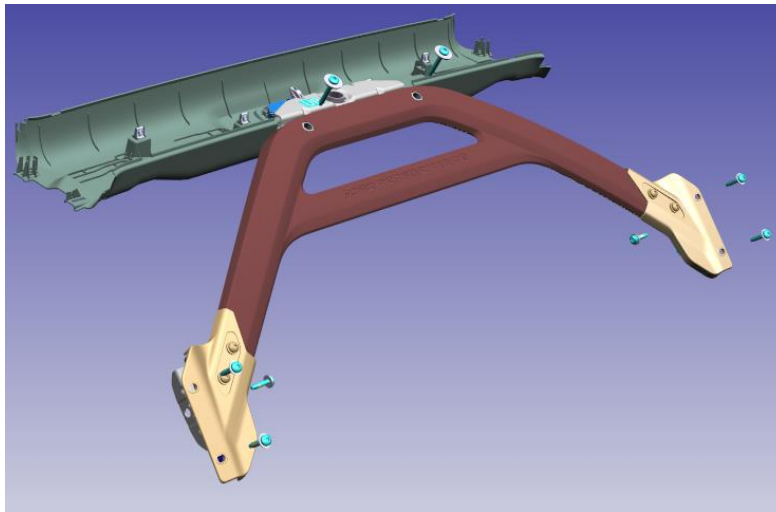


Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


**Kit contents:**

<b>Description</b>	<b>Quantity</b>
C-Bow Brace Bracket	1
C-Bow Brace	1
C-Bow Bolt & Washer (M8x49)	2
C-Bow J Clip (M8)	2
C-Bow Bolt & Washer (M8x24)	2
C-Bow Bolt & Washer (M8x30)	6
C-Bow Interior Trim Piece	1

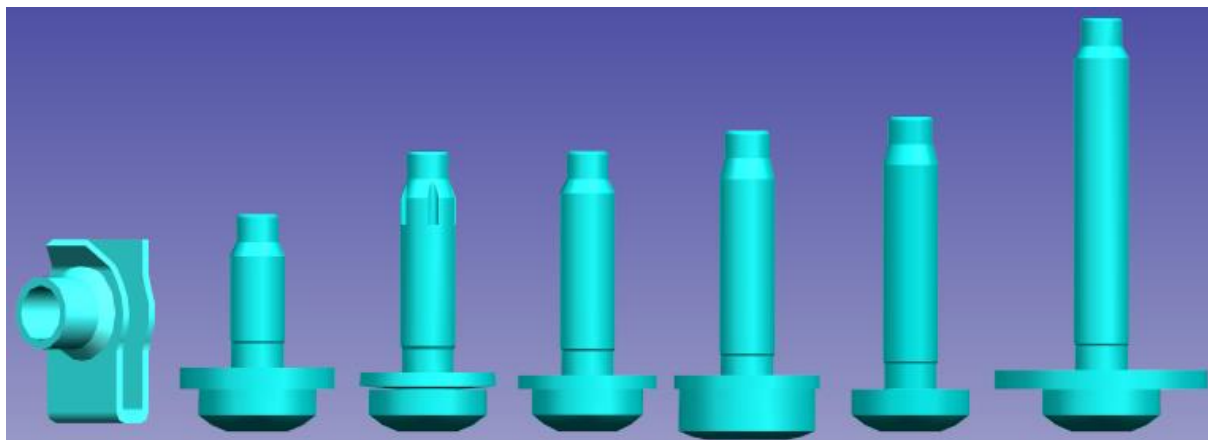

J Clip      21mm      24mm      30mm      33mm      35mm      49mm

**Special Tool(s) / General Equipment**

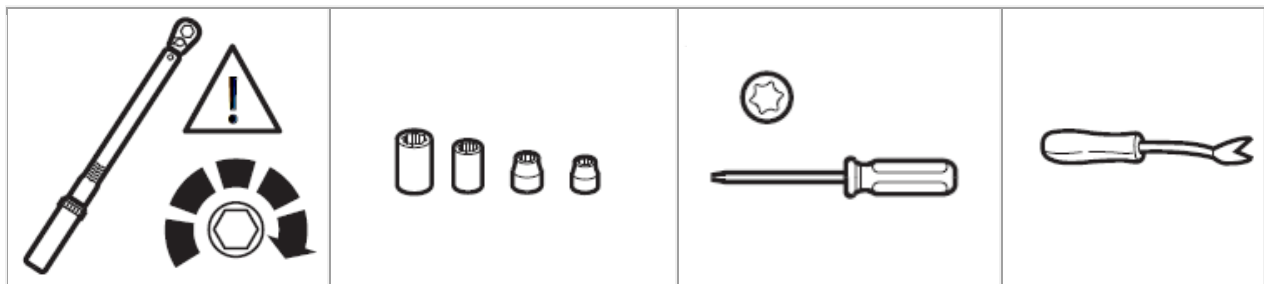

Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

### C-Bow Brace Removal

1. Use a plastic trim removal tool to remove the plastic rivet and middle rear header trim piece. Disconnect the electrical connector for the overhead light.



2. Disconnect the electrical connector for one side of the curtain airbag.  
*(This step is necessary for ease of installing the C-Bow Brace bracket.)*



Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

### C-Bow Brace Installation

1. Install the C-bow brace bracket to the backside of the C-bow brace using the bolts and washers (M8x49), as shown in the image.



2. Install the J-clips (M8) on the rear header, as shown in the image.

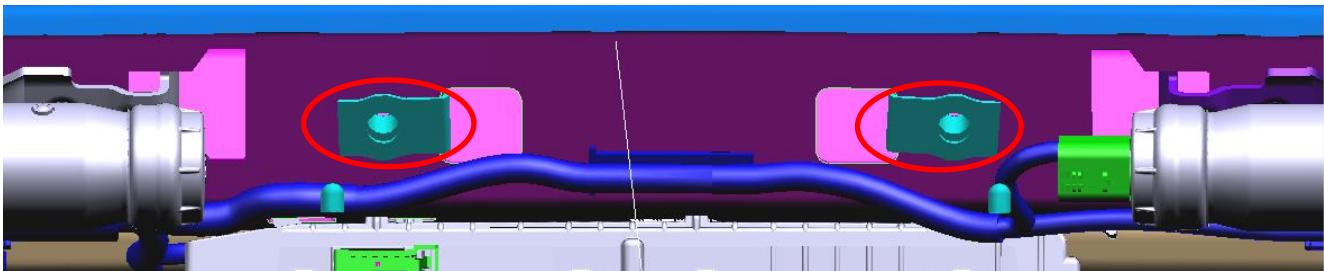


Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


3. Install the C-bow brace to the rear header using the bolts and washers (M8x24), as shown in the image.

 **Reconnect the electrical connector to the curtain airbag.**

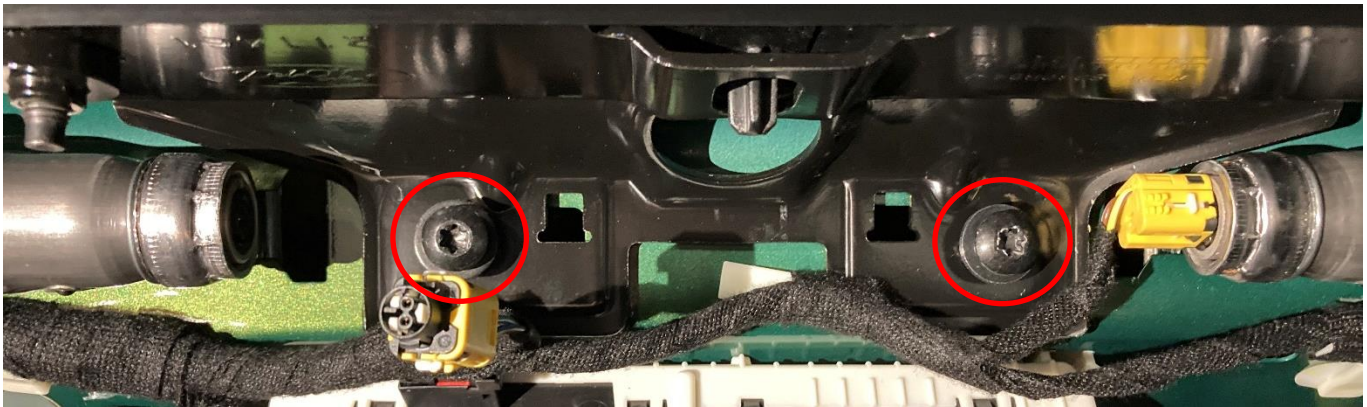

4. Install the C-bow brace to the side pillars using the bolts and washers (M8x30).

*(Left side shown, Right side similar.)*

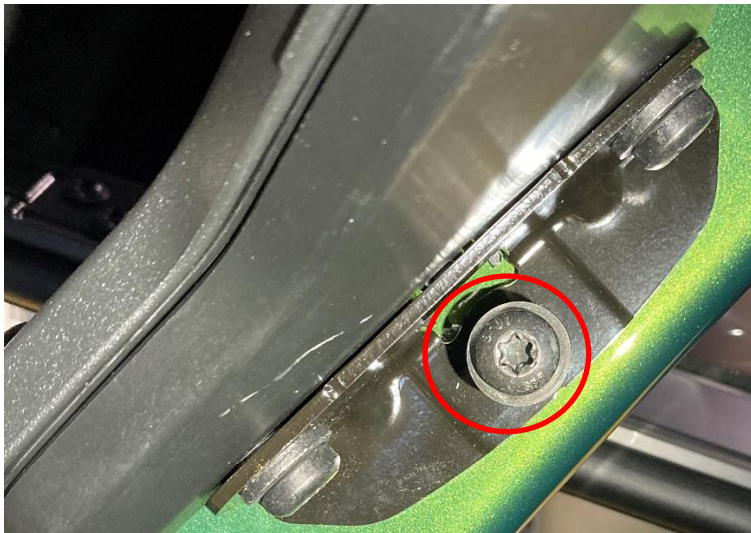

Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF  
FORD PERFORMANCE PARTS © Ford Motor Company 2020

5. Install the C-bow brace trim piece to the rear header.



Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)